

Refillable Ink Cartridges Apple

Cartridges:

M1949G/A	M3908G/A	M5692G/A
M1950G/A	M3908G/A	M5693G/A
M1951G/A	M3909G/A	M5694G/A
M1952G/A	M3909G/A	M8041G/C
M3240G/A	M4609G/A	M8041G/C
M3329G/A	M4609G/A	M8052G/A
M3330G/A	M5658G/A	
M3822G/A	M5659G/A	

Printers:

Color StyleWriter Series: Pro, 2400, 2500, 2200, 1500, 6500, 4500, 4100

StyleWriter Series: 2400, 2500, 2200, 1500, II, 1200, StyleWriter, Portable

Brother

Cartridges:

IN-10	LC04BK	LC25Y
IN-700	LC04C	LC31Bk
IN-710C	LC04M	LC31C
LC01BK	LC04Y	LC31M
LC01C	LC11BK	LC31Y
LC01M	LC11CL	LC41BK
LC01Y	LC21BK	LC41C
LC02BK	LC21C	LC41M
LC02C	LC21M	LC41Y
LC02M	LC21Y	LC51BK
LC02Y	LC25BK	LC51C
LC03BC	LC25C	LC51M
LC03MY	LC25M	LC51Y

Printers:

HJ Series: HJ-100, HJ-100i, HJ-400

WP Series: 7000J, 7500J, 7800J, 6400J, 6500J, 6700JSPL, 7400J, 7550J, 7550J plus, 7700CJ

DP Series: DP-300CJ, DP-350CJ, DP-525CJ, DP-530CJ, DP-540CJ, DP-550CJ

Ensemble Series: Ensemble

LW Series: LW-710i, LW-730i, LW-750ic, LW-800ic, LW-810ic, LW-830ic, LW-840ic

PDP Series: 100J, 300C

MFC Series: MFC-7000FC, MFC-7200FC, MFC-7150C, MFC-7160C, MFC-9100C, MFC-7300C, MFC-7400C, MFC-9200C, MFC-7050C, MFC-3100C, MFC-3200C, MFC-5100C, MFC-5200C, MFC-4420C, MFC-4820C, MFC-3220C, MFC-3320CN, MFC-3420C, MFC-3820CN, MFC-210C, MFC-420CN, MFC-620CN, MFC-640CW, MFC-820CW, MFC-3240C, MFC-3340CN, MFC-5440CN, MFC-5840CN, MFC-240C, MFC-440CN, MFC-665CW, MFC-845CW, MFC-3360C, MFC-5460CN, MFC-5860CN

MP Series: MP21C, MP21CDX

IntelliFax Series: IntelliFax-1800C, IntelliFax-1820C, IntelliFax-1920CN, IntelliFax-1840C, IntelliFax-1940CN, IntelliFax-2440C, IntelliFax-1360, IntelliFax-1860C, IntelliFax-1960CN, IntelliFax-2480C, IntelliFax-2580C

DCP Series: DCP-4020C, DCP-110C, DCP-120C, DCP-130C, DCP-330C

Bryce

Printers:

5K-L, BOS 10, 5K-LE, 7K-E, 9K-L, 13K, 22K, 24K, 24K-P/PC, 26K, 30K, Bryce-jet Mack 1

Canon**Cartridges:**

BC-01	BCI-3eBk (BCI-3Bk)	BCI-8M
BC-02	BCI-3eC (BCI-3C)	BCI-8PBk
BC-05	BCI-3eM (BCI-3M)	BCI-8PC
BC-06	BCI-3ePBk (BCI-3PB)	BCI-8PM
BC-10	BCI-3ePC (BCI-3PC)	BCI-8Y
BC-11e	BCI-3ePM (BCI-3PM)	BJI-201Bk
BC-20	BCI-3eY (BCI-3Y)	BJI-201HC Bk (BJI-201B)
BC-22e	BCI-5Bk	BJI-201C
BC-23	BCI-5C	BJI-201M
BC-40B	BCI-5M	BJI-201Y
BC-40C	BCI-5Y	BX-02
BC-40M	BCI-5PC	BX-3 (BX-03)
BC-40Y	BCI-5PM	CL-41
BC-60	BCI-61	CL-51
BC-61	BCI-62	CL-52
BC-62e	BCI-6Bk	CLI-8Bk
BCI-10	BCI-6C	CLI-8C
BCI-11Bk	BCI-6M	CLI-8M
BCI-11Clr (BCI-11C)	BCI-6PC	CLI-8Y
BCI-15Bk	BCI-6PM	CLI-8PC
BCI-15C	BCI-6Y	CLI-8PM
BCI-21Bk (BCI-21B)	BCI-7G	PG-40
BCI-21Clr (BCI-21C)	BCI-7R	PG-50
BCI-24Bk (BCI-24B)	BCI-8Bk	PGI-5
BCI-24C	BCI-8C	

Printers:

BJ Series: BJ-5, BJ-10, BJ-10e, BJ-10ex, BJ-10sx, BJ-10v, BJ-15v, BJ-100, BJ-200, BJ-200e, BJ-200ex, BJ-220JC, BJ-220JS, BJ-230, BJ-20, BJ-30, BJ-30v

BJC Series: BJC-150, BJC-210, BJC-240, BJC-240 Photo, BJC-240L, BJC-250, BJC-251, BJC-255, BJC-265, BJC-1000, BJC-1010, BJC-50, BJC-55, BJC-70, BJC-80, BJC-85, BJC-85W, BJC-2000, BJC-2010, BJC-2100, BJC-2110, BJC-2115, BJC-2120, BJC-2125, BJC-2130, BJC-4000, BJC-4100, BJC-4200, BJC-4300, BJC-4304, BJC-4400, BJC-4550, BJC-4650, BJC-5500, BJC-5000, BJC-5100, BJC-7000, BJC-7004, BJC-7100, BJC-8000, BJC-30, BJC-35, BJC-35v, BJC-2114, BJC-3000, BJC-3010, BJC-6000, BJC-6500, BJC-8200, BJC-8500, BJC-600, BJC-600e, BJC-610, BJC-620

FAX Series: B190, B200, B220, B210C, B215C, B230C, B310, B320, B340, B360, B360if, B100, B110, B120, B140, B150, B155, FAX-JX200

FAXPHONE Series: B60, B70, B75, B140, B150, B160, B170, B740, B45, B95, B540, B550, B640

Star Writer Series: 60, 70, 80, 80 Deluxe, 85, 95, 400, 500, Pro 5000, Jet 300, Jet 4000, Jet 350C, Jet 550C

LR Series: LR1 PrintStation

CFX Series: B380if

MultiPASS Series: C20, C30, C50, C530, C545, C555, C560, C635, C2500, C3000, C3500, C5000, C5500, C70, C75, C80, F20, MP360, MP370, MP390, C100, C400, C600, C755, F30, F50, F60, F80, MP700, MP730, 1000, 10, 800

S Series: S100, S200, S200x, S300, S330, S400, S450, S500, S520, S530D, S600, S630, S750, S4500, S800, S820, S820D, S830D, S900, S9000

BN Series: 700C, 750, 200C

i Series: i70, i80, i250, i320, i350, i450, i455, i470D, i475D, i550, i560, i850, i860, i865, i6500, i900D, i905D, i950, i960, i965, i990, i9100, i9900, i9950

PIXMA Series: iP90, iP90v, iP1500, iP2000, MP110, MP130, MP410, MP430, iP3000, iP4000, iP4000R, iP5000, MP750, MP760, MP780, iP6000D, iP8500, iP1300, iP1600, iP1700, iP6310D, iP6320D, MP140, MP150, MP160, MP170, MP180, MP210, MP460, MP470, iP6210D, iP6220D, MP450, iP4200, iP4300, iP5200, iP5200R, iP6600D, iP6700D, MP500, MP530,

MP600, MP800, MP800R, MP810, MP830, MP950, MP960, Pro9000, iP3300, iP5300, MP510

Compaq

Printers:

IJ Series: IJ650, IJ652, IJ300, IJ700, IJ750, IJ900, IJ1200, IJ600, IJ200

A Series: A900, A1000, A1500, A3000, A4000

C Series: C3-1000

DEC

Cartridges:

LJ50X-AA

LJ50X-AC

LJ50X-AB

LJ50X-AK

Printers:

ColorWriter Series: 110i, 120ic, 520ic, 550ic

DECJET Series: 1000, 2000

DECmultiJET Series: 1000, 2000

DECWriter Series: 90ip, 100i, 110i, 500i

LJ Series: 100

Dell

Cartridges:

7Y743 (X0502)

T0529 (K1014, N5878)

T0602 (K1145, J740Color)

7Y745 (X0504)

T0530 (K1017, N5882)

T5480 (M4640, J5566, R5956)

PG324 (JF333)

T0601 (K1143, J740Bk)

T5482 (M4646, J5567, T5974)

Printers:

A Series: A940, A960, A920

725, 810, 720, 922, 924, 942, 944, 946, 962, 964

J Series: J740

Encad Computer

Printers:

CadJet, NovaJet, NovaJet II, NovaJet III

Epson

Cartridges:

S020025

T016201 (T016)

T043120 (T0431)

S020034

T017201 (T017)

T044120 (T0441)

S020036

T018201 (T018)

T044220 (T0442)

S020047

T019201 (T019)

T044320 (T0443)

S020049

T020201 (T020)

T044420 (T0444)

S020062

T026201 (T026)

T048120 (T0481)

S020089

T027201 (T027)

T048220 (T0482)

S020093

T028201 (T028)

T048320 (T0483)

S020097

T029201 (T029)

T048420 (T0484)

S020108	T032120 (T0321)	T048520 (T0485)
S020110	T032220 (T0322)	T048620 (T0486)
S020118	T032320 (T0323)	T054020 (T0540)
S020122	T032420 (T0324)	T054120 (T0541)
S020126	T033120 (T0331)	T054220 (T0542)
S020130	T033220 (T0332)	T054320 (T0543)
S020138	T033320 (T0333)	T054420 (T0544)
S020187	T033420 (T0334)	T054720 (T0547)
S020189	T033520 (T0335)	T054820 (T0548)
S020191	T033620 (T0336)	T054920 (T0549)
S020193	T034120 (T0341)	T0551 (T0551)
S187093	T034220 (T0342)	T0552 (T0552)
S189108	T034320 (T0343)	T0553 (T0553)
S191089	T034420 (T0344)	T0554 (T0554)
S193110	T034520 (T0345)	T060120 (T0601)
T001011 (T001)	T034620 (T0346)	T060220 (T0602)
T003011 (T003)	T034720 (T0347)	T060320 (T0603)
T003012	T034820 (T0348)	T060420 (T0604)
T005011 (T005)	T036120 (T036)	T062120 (T0621)
T007201 (T007)	T037020 (T037)	T063120 (T0631)
T008201 (T008)	T040120 (T040)	T063220 (T0632)
T009201 (T009)	T041020 (T041)	T063320 (T0633)
T013201 (T013)	T042220 (T0422)	T063420 (T0634)
T014201 (T014)	T042320 (T0423)	
T015201 (T015)	T042420 (T0424)	

Printers:

Stylus 400, Stylus 800, Stylus 800+, Stylus 1000, Stylus 1000+, Stylus 820, Stylus 1520, Stylus 720, Stylus 1160, 1000 ICS

MJ Series: MJ-101, MJ-400, MJ-500, MJ-500V2, MJ-800C, MJ-1000, MJ-1000V2, MJ-500C, MJ-700V2C, MJ-900C, MJ-5000C

Color Series: Stylus Color, Stylus 200, Stylus 820, Stylus 1500, Stylus 400, Stylus 600, Stylus 600Q, Stylus 800, Stylus 800N, Stylus 810, Stylus 850, Stylus 850N, Stylus 850Ne, Stylus 1520, Stylus 500, Stylus 3000, Stylus 300, Stylus 440, Stylus 460, Stylus 640, Stylus 660, Stylus 670, Stylus 750, Stylus 750i, Stylus 740, Stylus 740i, Stylus 760, Stylus 860, Stylus 1160, Stylus 900, Stylus 900G, Stylus 900N, Stylus 980, Stylus 980N, Stylus 480, Stylus 480SX, Stylus 480SXU, Stylus 580, Stylus 2000P, Stylus 680, Stylus 685, Stylus 777, Stylus 777i, Stylus 8? (888), Stylus 83, Stylus 880, Stylus 880i

Color Pro Series: Stylus Color Pro, Stylus XL, Stylus XL+

Pro Series: Stylus Pro, Stylus XL, Stylus XL+, Stylus 5000

Color II Series: Stylus Color II, Stylus Color IIs

Photo Series: Stylus Photo, Stylus 700, Stylus 720, Stylus 750, Stylus 1200, Stylus 780, Stylus 785EPX, Stylus 790, Stylus 825, Stylus 870, Stylus 870LE, Stylus 875DC, Stylus 875DCS, Stylus 890, Stylus 895, Stylus 900, Stylus 915, Stylus 1270, Stylus 1280, Stylus 1290, Stylus 1290S, Stylus 2000P, Stylus 810, Stylus 820, Stylus 830, Stylus 830U, Stylus 925, Stylus 935, Stylus 910, Stylus 950, Stylus 960, Stylus 2100, Stylus 2200

Photo EX Series: Stylus Photo EX

Maxart Series: PM-9000C

Scan Series: Stylus 2000, Stylus 2500, Stylus 2500 Pro

C Series: Stylus C20, Stylus C20SX, Stylus C20UX, Stylus C40S, Stylus C40SX, Stylus C40UX, Stylus C50, Stylus C60, Stylus C61, Stylus C70, Stylus C70+, Stylus C80, Stylus C80N, Stylus C80WN, Stylus C82, Stylus C82N, Stylus C82WN, Stylus C42, Stylus C42+, Stylus C42S, Stylus C42SX, Stylus C42SXU, Stylus C42UX, Stylus C44, Stylus C44+, Stylus C44UX, Stylus C46, Stylus C46+, Stylus C46UX, Stylus C62, Stylus C84, Stylus C84N, Stylus C84WN, Stylus C86, Stylus C64, Stylus C66, Stylus C68, Stylus C88, Stylus C88+, Stylus C67, Stylus C87, Stylus C87PE

CX Series: Stylus CX3100, Stylus CX5100, Stylus CX5200, Stylus CX5400, Stylus CX3200, Stylus CX6400, Stylus CX6600, Stylus CX3600, Stylus CX4600, Stylus CX3800, Stylus CX3810, Stylus CX4200, Stylus CX4800, Stylus CX5800F, Stylus CX7800, Stylus CX4100, Stylus CX4700

Photo R Series: Stylus Photo R200, Stylus Photo R220, Stylus Photo R300, Stylus Photo R300M, Stylus Photo R320, Stylus Photo R340, Stylus Photo R800, Stylus Photo R1800

Photo RX Series: Stylus Photo RX500, Stylus Photo RX600, Stylus Photo RX620, Stylus Photo RX420

HP

Cartridges:

02 Black (C8721WN)	22 (C9352AN)	57 (C6657AN)
02 Cyan (C8771WN)	23 (C1823D)	58 (C6658AN)
02 Magenta (C8772WN)	25 (51625A)	59 (C9359AN)
02 Yellow (C8773WN)	26 (51626A)	74 (CB335WN)
02 Light Cyan (C8774WN)	27 (C8727AN)	74XL (CB336WN)
02 Light Magenta (C8775WN)	28 (C8728AN)	75 (CB337WN)
10 Black (C4844A)	29 (51629A)	75XL (CB338WN)
10 Cyan (C4841A)	33 (51633M)	78 (C6578DN)
10 Magenta (C4843A)	34 (C6634AN)	92 (C9362WN)
10 Yellow (C4842A)	35 (C6635AN)	93 (C9361WN)
11 Cyan (C4836AN)	40 Black (51640A)	94 (C8765WN)
11 Magenta (C4837AN)	40 Cyan (51640C)	95 (C8766WN)
11 Yellow (C4838AN)	40 Magenta (51640M)	96 (C8767WN)
14 Black (C5011DN)	40 Yellow (51640Y)	97 (C9363WN)
14 Color (C5010DN)	41 (51641A)	98 (C9364WN)
15 (C6615DN)	44 Cyan (51644C)	99 (C9369WN)
16 (C1816A)	44 Magenta (51644M)	100 (C9368AN)
17 (C6625AN)	44 Yellow (51644Y)	844 (C3844A)
19 (C6628AN)	45 (51645A)	845 (C3845A)
20 (C6614DN)	49 (51649A)	
21 (C9351AN)	56 (C6656AN)	

Printers:

Photosmart Series: 3108, 3110, 3210, 3210v, 3210xi, 3310, 3310xi, 8250, 1000, 1100, 1115, 1115cvr, 1115vm, 1215, 1215vm, 1218, 1218xi, 1315, 1315vm, 7150, 7260, 7260v, 7260w, 7350, 7450, 7450v, 7450xi, 7550, 7660, 7660v, 7660w, 7755, 7760, 7760v, 7760w, 7960, 7960w, 100, 130, 130v, 145, 145v, 145xi, 230, 230v, 230xi, 245, 245v, 245xi, 2600 Series, 2610, 2610v, 2610xi, 2710, 2710xi, 7850, 8150, 8150v, 8150xi, 8450, 8450xi, 325, 325v, 325xi, 335, 335v, 335xi, 375, 375B, 375v, 385, 385v, 385xi, 422, 425, 428, 428xi, 475, 475v, 475xi, 2570, 2575, 2575v, 2575xi, 8050, 8050v, 8050xi, 8750, Photo printer

Photosmart C Series: Photosmart C5140, Photosmart C5150, Photosmart C5180, Photosmart C6150, Photosmart C6154, Photosmart C6170, Photosmart C6175, Photosmart C6180, Photosmart C6183, Photosmart C6185, Photosmart C6188, Photosmart C6190, Photosmart C7150, Photosmart C7170, Photosmart C7177, Photosmart C7180, Photosmart C7183, Photosmart C7186, Photosmart C7188, Photosmart C7190, Photosmart C4280, Photosmart C5280, Photosmart C3100, Photosmart C3140, Photosmart C3150, Photosmart C3180, Photosmart C4180, Photosmart C4140, Photosmart C4150

Photosmart D Series: Photosmart D6160, Photosmart D7145, Photosmart D7155, Photosmart D7160, Photosmart D7345, Photosmart D7355, Photosmart D7360, Photosmart D5060, Photosmart D5065, Photosmart D5069, Photosmart D5145, Photosmart D5155, Photosmart D5160

2000c, 2000cn, 2000cse, 2000cxi, 2500c, 2500c+, 2500cm, 2500cse, 2500cxi

Business Inkjet Series: 1000, 1100d, 1100dtn, 1200d, 1200dn, 1200dtn, 1200dtwn, 2200, 2200se, 2200xi, 2230, 2250, 2250tn, 2280, 2280tn, 2300, 2300dtn, 2300n, 2600, 2600dn, 2800, 2800dt, 2800dtn, 3000, 3000dtn, 3000n

Color Inkjet cp Series: Color Inkjet cp1700, Color Inkjet cp1700d, Color Inkjet cp1700ps, Color Inkjet cp1160, Color Inkjet cp1160tn

Designjet Series: 100plus, 100plus nr, 500, 500ps, 800, 800ps, 815mfp, Copier cc800ps, 120, 200, 220, 600, 230, 250C, 330, 350C, 430, 450c, 455ca, 488ca, 650c, 650c/ps, 750c, 750c Plus, 755cm, 700

Officejet Series: 9100 Series, 9110, 9120, 9130, 7100, 7110, 7110A2L, 7110xi, 7115, 7130, 7130xi, 7135xi, 7140xi, 5105, 5110, 5110A2L, 5110v, 5110xi, 700, 710, 720, 725, 4311, 4312, 4314, 4315, 4315v, 4315xi, 4317, 4319, 4350, 4352, 4353, 4355, 4357, 4359, 5600 Series, 5605, 5605z, 5608, 5609, 5610, 5610v, 5610xi, 5615, Officejet, 300, 310, 320, 330, 350, 4105, 4105z, 4110, 4110v, 4110xi, 4115, 4211, 4212, 4215, 4215v, 4215xi, 4219, 4251, 4252, 4255, 4259, 500, 520, 570, 580, 590, 600, 610, 630, 635, 5500 Series, 5505, 5508, 5510, 5510v, 5510xi, 5515, 6110, 6110v, 6110xi, 6310, 6200, 6210, 6210v, 6210xi, 7210, 7210v, 7210xi, 7310, 7310xi, 7410, 7410xi

Officejet Pro K Series: Officejet Pro K850, Officejet Pro K850dn

Digital Copier Series: 610, 310, 410

Officejet D Series: Officejet D125xi, Officejet D135, Officejet D135xi, Officejet D145, Officejet D155xi

Deskjet Series: 810c, 812c, 815c, 825c, 825cvr, 840c, 841c, 842c, 843c, 845c, 845cvr, 920c, 940c, 940cvr, 3820, 610c,

610cl, 612c, 630c, 632c, 640c, 642c, 648c, 656c, 656cvr, 690c, 692c, 693c, 694c, 695c, 697c, 350c, 350c-cbi, 3747, 3910, 3915, 3918, 3920, 3930, 3930v, 3938, 3940, 3940v, D1320, D1330, D1338, D1360, D2330, D2345, D2360, D3160, F310, F325, F335, F340, F350, F370, F378, F380, F385, F388, F390, F394, F2110, F2120, F2128, F2149, F2180, F2185, F2187, F2188, F4135, F4140, F4150, F4172, F4175, F4180, F4185, F4188, F4190, F4194, 710c, 712c, 720c, 722c, 830c, 832c, 880c, 882c, 885, 890c, 890cse, 890cxi, 895c, 895cse, 895cxi, 1120c, 1120cse, 1120cxi, 1125c, 310, 310+, 320, 340, 340c, 340c, 340cm, 340cv, 400, 400L, 420, 420c, 500c, 540, 550c, 560c, 560j, Deskjet, Deskjet+, 500, 510, 520, 3320, 3322, 3420, 3425, 3450, 3520, 3520v, 3535, 3550, 3620, 3620v, 3650, 3650v, 3651, 3653, 3740, 3740v, 3745, 3745v, 3843, 3845, 3845xi, 3847, 3945, 600, 600c, 660c, 660cse, 670c, 670tv, 672c, 680c, 682c, portable, 300j, 1200c, 1200c-ps, 1600c, 1600cm, 1600cn, 820c, 820cse, 820cxi, 850c, 850cxi, 855c, 855cse, 855cxi, 870c, 870cse, 870cxi, 1000c, 1000cse, 1000cxi, 1100c, 1100cse, 1100cxi, 930c, 932c, 935c, 950c, 952c, 955c, 959c, 960c, 960cse, 960cxi, 970c, 970cse, 970cxi, 980cxi, 990c, 990cm, 990cse, 990cxi, 995c, 995ck, 1180c-ps, 1220c, 1220c-ps, 1220cse, 1220cxi, 6122, 6127, 9300, 450c, 450ci, 450wbt, 5150, 5150w, 5550, 5551, 5650, 5650w, 5850, 5850w, 9650, 9670, 9680, D4260, D4280, 5420v, 5440, 5440v, 5440xi, 5442, 5443, D4145, D4155, D4160, 460c, 460cb, 460wf, 460wbt, 5740, 5740xi, 5743, 5745, 5748, 6520, 6520xi, 6540, 6540dt, 6540xi, 6830v, 6840, 6840dt, 6840xi, 9800, 9800d, 5940, 5940xi, 6940, 6940dt, 6980, 6980dt

Fax Series: 1230, 1230xi, 925xi, 1010, 1010xi, 1020, 1020xi, 1040, 1040xi, 1050, 1250, 200, 300, 310, 330, 340, 350, 700, 750, 800, 900, 950, 1240, 910, 920, 1220, 1220xi

Officejet V Series: Officejet V30, Officejet V40, Officejet V40xi, Officejet V45, Officejet VP

PSC Series: 500, 500xi, 720, 750, 750xi, 760, 950, 950vr, 950xi, 370, 380, 1401, 1402, 1403, 1406, 1408, 1410, 1410v, 1410xi, 1415, 1417, 1310, 1311, 1312, 1315, 1315v, 1315xi, 1317, 1318, 1110, 1110v, 1110xi, 1118, 1200, 1205, 1209, 1210, 1210A2L, 1210v, 1210xi, 1340, 1345, 1350, 1350v, 1350xi, 1355, 2105, 2108, 2110, 2110v, 2110xi, 2115, 2150, 2170, 2171, 2175, 2175v, 2175xi, 2210, 2210v, 2210xi, 2405, 2410, 2410v, 2410xi, 2510, 2510xi, 1507, 1510, 1510v, 1510xi, 1600, 1610, 1610v, 1610xi, 2350, 2355, 2355v, 2355xi, 2610, 2710

Deskwriter Series: 694c, c, 310, 310+, 320, 400, 500c, 540, 550c, 560c, Deskwriter, 510, 520, 600, 660c, 680c

Color Copier Series: 140, 145, 150, 155, 160, 170, 260, 270, 210, 210LX, 110, 120, 180, 190, 280, 290

Officejet R Series: Officejet R40, Officejet R40xi, Officejet R45, Officejet R60, Officejet R65, Officejet R80, Officejet R80xi

Officejet T Series: Officejet T45, Officejet T45xi, Officejet T65, Officejet T65xi

Officejet Pro Series: 1170c, 1170cse, 1170cxi, 1175c, 1175cse, 1175cxi, 1150c, 1150cse

Officejet L Series: Officejet LX

E-printer Series: E-printer

Copyjet Series: Copyjet, M

Officejet G Series: Officejet G55, Officejet G55xi, Officejet G85, Officejet G85xi, Officejet G95

Officejet K Series: Officejet K60, Officejet K60xi, Officejet K80, Officejet K80xi

Photosmart P Series: Photosmart P1000, Photosmart P1000xi, Photosmart P1100, Photosmart P1100xi, Photosmart P1215, Photosmart P1215vm, Photosmart P1218, Photosmart P1218xi

Officejet J Series: Officejet J5700 Series, Officejet J5725, Officejet J5730, Officejet J5735, Officejet J5738, Officejet J5740, Officejet J5750, Officejet J5780, Officejet J5783, Officejet J5785, Officejet J5788, Officejet J5790

Photosmart B Series: Photosmart B8350

Photosmart Pro B Series: Photosmart Pro B8350

IBM

Cartridges:

1980630

Printers:

4070 IJ Model 1, 4070 IJ Model 2, 4076 ExecJet II

ExecJet Series: II

ITT Courier

Printers:

Fax 3757, Fax 210, Fax 220, Fax 3735, Fax 3740, Fax 3745

InfoTec

Printers:

Fax 3520, Fax 3525, Fax 3510, Fax 3511, Fax 3522

Kodak

Printers:

PSA 1000, PM 100

Konica Minolta

Printers:

Fax Series: 1200, 1300, 9410, 9450, 1400

Lexmark

Cartridges:

10N0016 (16)	13620HC	16G0065 (65)
10N0026 (26)	1380490	17G0050 (50)
10N0217 (17)	1380491	17G0060 (60)
10N0227 (27)	1380492	18C0031 (31)
12A1970 (70)	1380493	18C0032 (32)
12A1975 (75)	1380619	18C0033 (33)
12A1980 (80)	1380620	18C0034 (34)
12A1985 (85)	1382050	18C0035 (35)
12A1990 (90)	1382060	18C0781 (1)
13400HC	15M0120 (20)	18C190E (2)
1361400	15M0125 (25)	18L0032 (82)
1361760	15M2971 (71)	18L0042 (83)
13619HC	16G0055 (55)	

Printers:

4070 Model 1, 4070 Model 2, 3200, 5000, 5700, 5770, 7000, 7200, 7200V, 1000, 1020, 1100, 2030, 2050, 2055, 3000, 4015, 4076 ExecJet II, 4076, 4077, 40125, 40126, 40129, 4079, 4079 Plus, 2070

i Series: i3

X Series: X74, X75, X1110, X1130, X1140, X1150, X1155, X1160, X1170, X1180, X1185, X1190, X1195, X1240, X1270, X2230, X2250, X63, X73, X83, X84, X85, X125, X4250, X4270, X3350, X3530, X5250, X5270, X5450, X5470, X7170, X7350, X8350, X2300, X2310, X2330, X2350, X2470, X3330, X3370, X3470, X2480, X3480, X65, X5130, X5150, X5190, X6150, X6170, X6180, X6190

Z Series: Z13, Z23, Z23e, Z24, Z25, Z25L, Z33, Z34, Z35, Z515, Z517, Z600, Z601, Z603, Z605, Z611, Z615, Z617, Z645, Z11, Z31, Z41, Z42, Z43, Z45, Z45se, Z51, Z52, Z53, Z54, Z54se, Z82, Z22, Z32, Z703, Z705, Z707, Z715, Z710, Z12, Z845, Z1300, Z815, Z816, Z735, Z55, Z55se, Z65, Z65n, Z65p

Optra Color Series: 40, 40n, 45, 45n

P Series: P706, P707, P3120, P3150, P122, P915, P4330, P4350, P6250, P6350, P315, P450

ExecJet Series: II, IIc

Medley Series: Medley, 4c, 4sx, 4x

WinWriter Series: 100, 150c

Home Copier Series: Plus

x Series: X2530, X2550, X2500

NEC

Printers:

Jetmate Series: 400, 800, 1000

SuperScript Series: 100C, 150C

Nec

Cartridges:

30-060

30-065

Okidata

Cartridges:

52109301

52110001

52110003

52109302

52110002

52110004

Printers:

OKIFax Series: 740, 740MF

OKIJet Series: 300C, 2010, 2050, 2020, 2500

Olivetti

Printers:

JetLab Series: 500

JP Series: 190, 150, 150W, 170, 192, 250, 270, 350, 350W, 360, 370, 450, 470

FaxLab Series: 200, 200P, 210, 250, 250P, 260

OFX Series: 500, 500 linkfax, 520, 525, 540, 560, 570, 580, 1000, 1100, 1100 linkfax, 1200, 1900 L, 1900 linkfax, 2035, 2045, 2100, 2200, 3100, 3200, 800

ArtJet Series: 10, 20, 22

StudioJet Series: 300

Olympia

Printers:

OLYFAX Series: 3740, 3750

QuietStar Series: 4

OF Series: 740, 750, 750 i, 760, 772, 775, 700, 710, 710 P, 720, 720 P

Panasonic

Printers:

Panafax KX Series: Panafax KX-F1600, Panafax KX-F1650

Panafax UF Series: Panafax UF-342, Panafax UF-344, Panafax UF-300, Panafax UF-305, Panafax UF-310, Panafax UF-311, Panafax UF-312, Panafax UF-315, Panafax UF-321, Panafax UF-322, Panafax UF-332, Panafax UF-333

Panafax PD Series: Panafax PD-4200

Panafax PX Series: Panafax PX-350, Panafax PX-360

PJ Series: PJ-250

Pitney Bowes

Cartridges:

769-0 (769-3)

Printers:

9100 Fax

Addressright Series: Addressright

Documatch Series: Documatch

W Series: W800, W880, W890, W651

E Series: E700, E707

Rena

Printers:

DA-600, DA-606, DA-607, DA-612, DA-613, DJP, PS 1000, PS 2000

Samsung

Printers:

MJ Series: MJ-4500C

MSYS Series: 4700, 4800

SCX Series: SCX-1100, SCX-1150F

SF Series: SF-430, SF-3150, SF-4500C, SF-4700, SF-4750C, SF-3000, SF-3100, SF-4000, SF-4020, SF-4100, SF-4120, SF-4200, SF-4220

SmartJet Series: SmartJet

FX Series: FX-4000, FX-4100, FX-4105, FX-4200, FX-4205, FX-4225

MyJet Series: II

Sharp

Cartridges:

AJ-C50B

AJ-C50C

UX-C70B

Printers:

FO Series: FO-1700, FO-1700R, FO-3700, FO-B1600

UX Series: UX-1200, UX-1200R, UX-1500, UX-1500R, UX-A1000, UX-B20, UX-B25, UX-B700, UX-B700e

AJ Series: AJ-5010, AJ-5030

Siemens

Printers:

Fax Series: 940, 950, 540, 550, 640, 740, 730, 730C

4812-L10

MD Series: MD-25

Stielow

Printers:

5923, 5949, 5951, 5980, 5952, 5953

Triumph Adler

Printers:

FX Series: 640, 640i, 640Ti, 645, 645i, 610i, 620i, 620i/PC, 621i, 621i/PC, 630, 631, 632i, 635, 636, 650Ti

HPR Series: 4812, 4814

JPR Series: 7825, 7825W, 7825WS, 7830, 7830C, 7840, 7845, 7847C, 7850, 7850WS, 7860

Xerox

Cartridges:

8R7638	8R7882	8R12591
8R7660	8R7903	Y100 (8R12728)
8R7661	8R7904	H100 (8R7971)
8R7662	8R7971	Y101 (8R7972)
8R7663	8R7972	Y102 (8R7973)
8R7880	8R7973	Y103 (8R7974)
8R7881	8R7974	

Printers:

2230ij, 7051, 3002, 3003, 3004, 3006, 4003, 4004

Document HomeCentre Series: Document HomeCentre

Document WorkCentre Series: 250, 450c, 450cp, 470cx, 480cx, 490cx, XK35c, XK50cx, Xi70c, M940, M950

SpinePrinter Series: SpinePrinter

XJ Series: XJ3, XJ5, XJ4C

DocuPrint Series: XJ6C, C8, C20, NC20, XJ8C, XJ9C, C11, C15, M750, M760